HOME
DECORATORS
C O L L E C T I O N

HDC# 17538 MFG# TW-19149WO / TW-19149DW
MANOR MIRROR 32"Hx25"Wx2"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

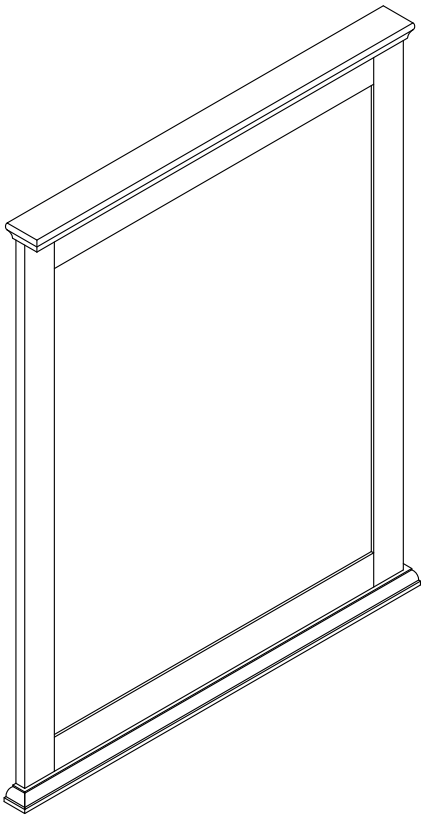

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

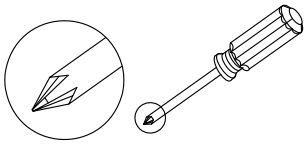

"+"Screw driver

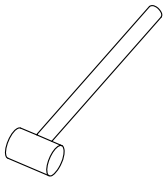

Rubber Mallet

Electric drill

PARTS LIST

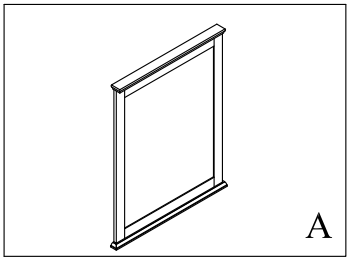

HARDWARE LIST

GECKO
FLAT HEAD SCREW
2 SETS

STEP 1:
USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF THE WALL. INSERT THE 2 GECKOS INTO THE HOLES BY RUBBER MALLET. INSERT 2 FLAT HEAD SCREWS INTO 2 GECKOS AND THEN HANG THE MIRROR ON THE WALL AS SHOWN.